

Fuse Holders for 1/4" x 1 1/4" and 5 x 20mm Fuses

HTB Panel Mount Series



Description

- For 1/4" x 1 1/4" and 5 x 20mm fuses
- All holder bodies have the option of using 1/4" x 1 1/4" or 5 x 20mm carriers
- Withstands 15 to 20 Lb-In torque to mounting nut when mounting fuse holder to panel
- High temperature, flame retardant, Thermoplastic meets UL 94V0



Specifications

Product Code	UL Rating (amps)	CSA Rating (amps)	Voltage Rating	Fuse Size	Quick Connect
HTB-X2I	20	16	250	1/4" x 1 1/4"	3/16"
HTB-X4I	20	16	250	1/4" x 1 1/4"	3/16"
HTB-X6I	20	16	250	1/4" x 1 1/4"	1/4"
HTB-X8I	20	16	250	1/4" x 1 1/4"	1/4"
HTB-X2M	16	16	250	5 x 20mm	3/16"
HTB-X4M	16	16	250	5 x 20mm	3/16"
HTB-X6M	16	16	250	5 x 20mm	1/4"
HTB-X8M	16	16	250	5 x 20mm	1/4"


Agency Information

- UL Recognized: IZLT2, E14853
- CSA Component Acceptance: Class 6225-01, File 47235
- VDE Certified: 136128, HTB-XXM
- SEMKO Certification: Ref. #0146149/01, HTB-XXM
- CE


Maximum Panel Thickness

Body Type	Inch	mm
HTB-2	0.30	7.62
HTB-3	0.30	7.62
HTB-4	0.125	3.18
HTB-5	0.125	3.18
HTB-6	0.30	7.62
HTB-8	0.125	3.18
HTB-9	0.125	3.18

Replacement Parts

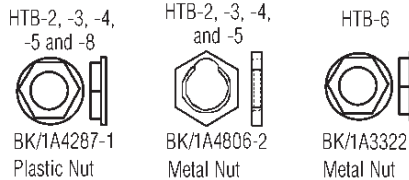

Mounting Dimensions - in (mm)

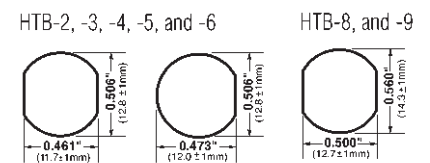

Dimensions - in (mm)

Knob Type Carrier	Maximum Panel Thickness	Terminal Options				Carrier Options	
		Solder/ 3/16" Quick-Connect		1/8" Quick-Connect		1/4" x 1 1/4" ("I" Equals Inches)	5 x 20mm ("M" Equals Metric)
		In-Line	Rt. Angle	In-Line	Rt. Angle	Knob	Knob
Low Profile Rear Hex Nut HTB-2	0.30" 7.62mm						—
		HTB-22I-R	HTB-24I-R	HTB-26I-R	HTB-28I-R	3	—
High Profile Rear Hex Nut HTB-4	0.125" 3.18mm						—
		HTB-42I-R	HTB-44I-R	HTB-46I-R	HTB-48I-R	3	—
Front Hex Nut HTB-6	0.30" 7.62mm						—
		HTB-62I-R	HTB-64I-R	HTB-66I-R	HTB-68I-R	3	—
Low Profile Snap-In HTB-8	0.125" 3.18mm						—
		HTB-82I-R	HTB-84I-R	HTB-86I-R	HTB-88I-R	3	—
		HTB-22M-R	HTB-24M-R	HTB-26M-R	HTB-28M-R	—	3
		HTB-42M-R	HTB-44M-R	HTB-46M-R	HTB-48M-R	—	3
		HTB-62M-R	HTB-64M-R	HTB-66M-R	HTB-68M-R	—	3
		HTB-82M-R	HTB-84M-R	HTB-86M-R	HTB-88M-R	—	3

Fuseholders and fuse carriers may be ordered separately.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Cooper Bussmann:

[BK/HTB-34I](#) [BK/HTB-34M](#) [BK/HTB-38I](#) [BK/HTB-38M](#) [BK/HTB-36I](#) [BK/HTB-32M](#) [BK/HTB-26M](#) [BK/HTB-26I](#)
[BK/HTB-22M](#) [BK/HTB-22I](#) [BK/HTB-28I](#) [BK/HTB-28M](#) [BK/HTB-24I](#) [BK/HTB-24M](#) [BK/HTB-58I](#) [BK/HTB-58M](#)
[BK/HTB-54M](#) [BK/HTB-52I](#) [BK/HTB-52M](#) [BK/HTB-56M](#) [BK/HTB-96M](#) [BK/HTB-96I](#) [BK/HTB-92I](#) [BK/HTB-92M](#)
[BK/HTB-98I](#) [BK/HTB-98M](#) [BK/HTB-94I](#) [BK/HTB-94M](#) [BK/HTB-24](#) [BK/HTB-28](#) [BK/HTB-26](#) [BK/HTB-22](#) [BK/HTB-88I](#)
[BK/HTB-88M](#) [BK/HTB-84I](#) [BK/HTB-84M](#) [BK/HTB-82M](#) [BK/HTB-82I](#) [BK/HTB-86M](#) [BK/HTB-86I](#) [BK/HTB-42M-SP](#)
[STI](#) [BK/HTB-24I-SP](#) [BK/HTB-42I-SP](#) [BK/HTB-44M-SP](#) [BK/HTB-22M-SP](#) [BK/HTB-44I-SP](#) [BK/HTB-62M-SP](#) [BK/HTB-](#)
[48I-SP](#) [BK/HTB-26M-SP](#) [BK/HTB-26I-SP](#) [BK/HTB-46I-SP](#) [BK/HTB-66M-SP](#) [BK/HTB-62I-SP](#) [BK/HTB-28I-SP](#)
[BK/HTB-22I-SP](#) [BK/HTB-46M-SP](#) [BK/HTB-36M-R](#) [BK/HTB-64I-R](#) [BK/HTB-34M-R](#) [BK/HTB-52I-R](#) [BK/HTB-52M-R](#)
[BK/HTB-54I-R](#) [BK/HTB-54M-R](#) [BK/HTB-56I-R](#) [BK/HTB-56M-R](#) [BK/HTB-48I-R](#) [BK/HTB-62M-R](#) [BK/HTB-46I-R](#)
[BK/HTB-64M-R](#) [BK/HTB-66I-R](#) [BK/HTB-82I-R](#) [BK/HTB-86I-R](#) [BK/HTB-86M-R](#) [BK/HTB-88I-R](#) [BK/HTB-88M-R](#)
[BK/HTB-62I-R](#) [BK/HTB-22M-R](#) [BK/HTB-24M-R](#) [BK/HTB-26I-R](#) [BK/HTB-26M-R](#) [BK/HTB-28M-R](#) [BK/HTB-48M-R](#)
[BK/HTB-32M-R](#) [BK/HTB-22I-R](#) [BK/HTB-38I-R](#) [BK/HTB-42I-R](#) [BK/HTB-44I-R](#) [BK/HTB-44M-R](#) [HTB-92I-R](#) [HTB-38M-](#)
[R](#) [HTB-46M-R](#) [HTB-58I-R](#) [HTB-66M-R](#) [HTB-68I-R](#) [HTB-82M-R](#) [BK/HTB-42M-R](#) [HTB-94I-R](#) [HTB-96M-R](#) [HTB-96I-](#)
[R](#)