

# 1 Gb (64M x 16 bit) 1.8v High Performance Mobile DDR SDRAM Advanced (Rev. 1.0, Mar. /2014)

### Confidential

#### **Features**

- 4 banks x 16M x 16 organization
- Data Mask for Write Control (DM)
- Four Banks controlled by BA0 & BA1
- Programmable CAS Latency: 2, 3
- Programmable Wrap Sequence: Sequential or Interleave
- Programmable Burst Length:
   2, 4, 8 or 16 for Sequential Type
   2, 4, 8 or 16 for Interleave Type
- Automatic and Controlled Precharge Command
- Power Down Mode
- Auto Refresh and Self Refresh
- Refresh Interval: 8192 cycles/64ms
- Double Data Rate (DDR)
- Bidirectional Data Strobe (DQS) for input and output data, active on both edges
- Differential clock inputs CLK and /CLK
- Power Supply 1.7V 1.95V
- Drive Strength (DS) Option: Full, 1/2, 1/4, 1/8
- Auto Temperature-Compensated Self Refresh (Auto TCSR)
- Partial-Array Self Refresh (PASR) Option: Full,
   1/2, 1/4, 1/8, 1/16
- Deep Power Down (DPD) mode
- Operating Temperature Range
  - Extended -25°C to 85°C
  - Industrial -40°C to 85°C
- 60 ball FPBGA package

#### ALL PRODUCTS ROHS COMPLIANT

### Description

The AS4C64M16MD1 is a four bank mobile DDR DRAM organized as 4 banks  $\times$  16M  $\times$  16. It achieves high speed data transfer rates by employing a chip architecture that prefetches multiple bits and then synchronizes the output data to a system clock.

All of the control, address, circuits is synchronized with the positive edge of an externally supplied clock. I/O transactions are possible on both edges of DOS.

Operating the four memory banks in an interleaved fashion allows random access operation to occur at a higher rate than is possible with standard DRAMs. A sequential and gapless data rate is possible depending on burst length, CAS latency and speed grade of the device.

Additionally, the device supports low power saving features like PASR, Auto-TCSR, DPD as well as options for different drive strength. It's ideally suitable for mobile application.

	6	Unit
System Frequency (f <sub>CK</sub> )	166 MHz	MHz
Clock Cycle Time (t <sub>CK3</sub> )	6	ns
Output data access Time	5	ns

### **ORDERING INFORMATION**

Part No.	Clock Frequency	Vdd/Vddq	Organisation	Package
AS4C64M16MD1-6BCN*	DDR333	1.8V/1.8V	16M x 16 Bits x 4 Banks	60-FPBGA
	166MHz			
AS4C64M16MD1-6BIN*	DDR333	1.8V/1.8V	16M x 16 Bits x 4 Banks	60-FPBGA
	166MHz			


<sup>\*</sup>B = FPBGA package

<sup>\*</sup> C = usually represents commercial temperature but in this case it Extended (-25°C to +85°C) I = Industrial temperature -40°C to 85°C

<sup>\*</sup> N = ROHS Compliant




### **Block Diagram**

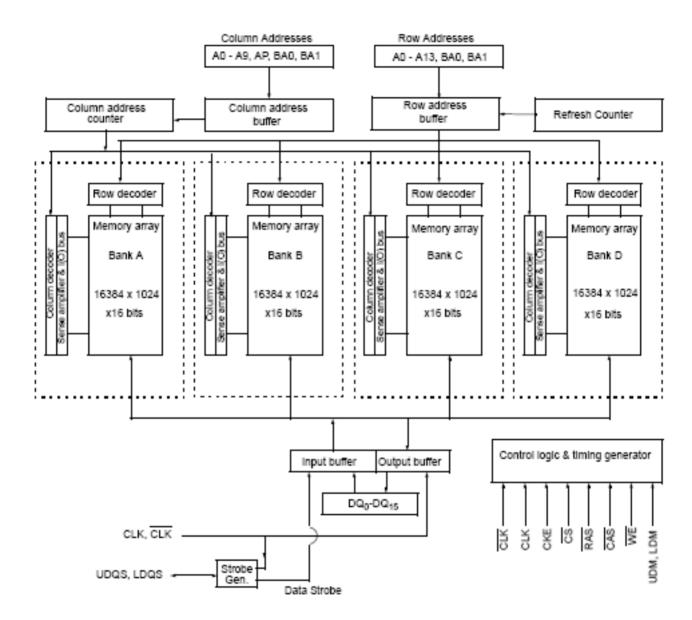





# 60 BALL BGA CONFIGURATION

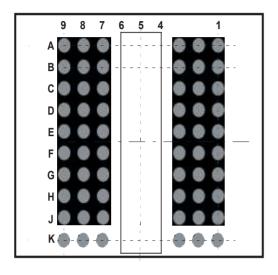

### Top View

		60Ba	all(6x10)	CSP			
	1	2	3	7	8	9	
Α	Vss	DQ15	Vssq	VDDQ	DQ0	Vdd	
В	VDDQ	DQ13	DQ14	DQ1	DQ2	Vssq	
С	Vssq	DQ11	DQ12	DQ3	DQ4	VDDQ	
D	VDDQ	DQ9	DQ10	DQ5	DQ6	Vssq	
Е	Vssq	UDQS	DQ8	DQ7	LDQS	VDDQ	
F	Vss	UDM	N.C.	A13	LDM	Vdd	
G	CKE	CK	CK	WE	CAS	RAS	
Н	A9	A11	A12	CS	BA0	BA1	
J	A6	A7	A8	A10/AP	A0	A1	
K	Vss	A4	A5	A2	A3	VDD	

### Pin Names

CLK, CLK	Differential Clock Input
CKE	Clock Enable
CS	Chip Select
RAS	Row Address Strobe
CAS	Column Address Strobe
WE	Write Enable
LDQS, UDQS	Data Strobe (Bidirectional)
A <sub>0</sub> -A <sub>13</sub>	Address Inputs
BA0, BA1	Bank Select

DQ <sub>0</sub> –DQ <sub>15</sub>	Data Input/Output
LDM, UDM	Data Mask
$V_{DD}$	Power (1.7V - 1.95V)
V <sub>SS</sub>	Ground
$V_{\rm DDQ}$	Power for I/O's (1.7V - 1.95V)
V <sub>SSQ</sub>	Ground for I/O's



### Signal Pin Description

Pin	Туре	Signal	Polarity	Function
CLK CLK	Input	Pulse	Positive Edge	The system clock input. All inputs except DQs and DMs are sampled on the rising edge of CLK.
CKE	Input	Level	Active High	Activates the CLK signal when high and deactivates the CLK signal when low, thereby initiates either the Power Down mode, Suspend mode, or the Self Refresh mode.
S	Input	Pulse	Active Low	$\overline{\text{CS}}$ enables the command decoder when low and disables the command decoder when high. When the command decoder is disabled, new commands are ignored but previous operations continue.
RAS, CAS WE	Input	Pulse	Active Low	When sampled at the positive rising edge of the clock, <u>CAS</u> , <u>RAS</u> , and <u>WE</u> define the command to be executed by the SDRAM.
A0 - A13	Input	Level		During a Bank Activate command cycle, A0-A13 defines the row address (RA0-RA13) when sampled at the rising clock edge.  During a Read or Write command cycle, A0-A9 defines the column address (CA0-CA9) when sampled at the rising clock edge.
				In addition to the column address, A10 is used to invoke autoprecharge operation at the end of the burst read or write cycle. If A10 is high, autoprecharge is selected and BA0, BA1 defines the bank to be precharged. If A10 is low, autoprecharge is disabled. During a Precharge command cycle, A10(=AP) is used in conjunction with BA0 and BA1 to control which bank(s) to precharge. If A10 is high, all four banks will be precharged simultaneously regardless of state of BA0 and BA1.
DQx	Input/ Output	Level		Data Input/Output pins operate in the same manner as conventional DRAMs.
BA0, BA1	Input	Level	_	Selects which bank is to be active.
LDQS, UDQS	Input/ Output	Level	_	Data Input/Output are synchronous edges of the DQS. LDQS for DQ0-DQ7, UDQS for DQ8-DQ15. Active on both edges for data input/output. Center aligned to input data and Edge aligned to output data.
UDM, LDM	Input	Pulse	Active High	In Write mode, DQM has a latency of zero and operates as a word mask by allowing input data to be written if it is low but blocks the write operation if is high. If it's high, LDM corresponds to DQ0-DQ7, and UDM corresponds to data on DQ8-DQ15.
VDD, VSS	Supply			Power and ground for the input buffers and the core logic.
VDDQ VSSQ	Supply	_	_	Isolated power supply and ground for the output buffers to provide improved noise immunity.




### Mode Register Set

The mode register stores the data for controlling the various operating modes of the mobile DDR, includes CAS latency, addressing mode, burst length, test mode, and various vendor specific options. The default value of the mode register is not defined. Therefore the mode register must be written after power up to operate the mobile DDR. The device should be activated with the CKE already high prior to writing into the Mode Register.

The Mode Register is written by using the MRS command. The state of the address signals registered in the same cycle as MRS command is written in the mode register. The value can be changed as long as all banks are in the idle state.

The mode register is divided into various fields depending on functionality. The burst length uses A2.. A0, CAS latency (read latency from column address) uses A6.. A4. BA0 must be set to low for normal operation. A9.. A13 is reserved for future use.

BA1 selects Extended Mode Register Setup operation when set to 1. Refer to the table for specific codes for various burst length, addressing modes and CAS latencies.

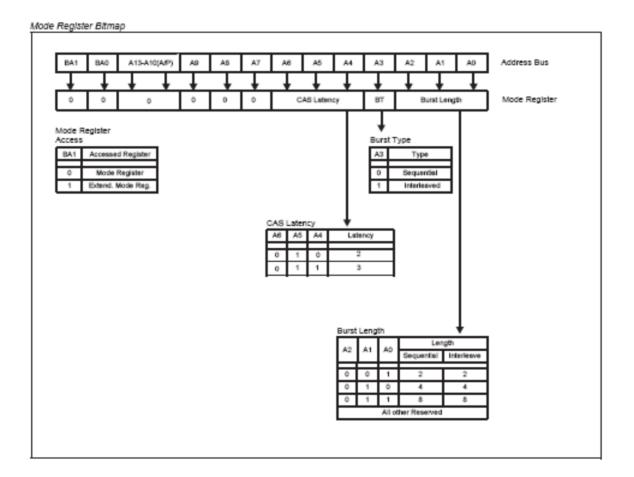


Confidential 32 Rev 1.0 Mar/2014



#### **EMRS**

The Extended Mode Register is responsible for setting the Drive strength options and Partial array Self Refresh. The EMRS can be programmed by performing a normal Mode Register Setup operation and setting the BA1=1 and BA0=0. In order to save power consumption, the mobile DDR SDRAM has five (PASR) options: Full array, 1/2, 1/4, 1/8, 1/16 of Full Array. Additionally, the device has internal temperature sensor to control self refresh cycle automatically according to the two temperature range; Max. 40 deg C, and Max. 85 deg C. This is the device internal Temperature Compensated Self Refresh(TCSR). The device has four drive strength options: Full, 1/2, 1/4 or 1/8.

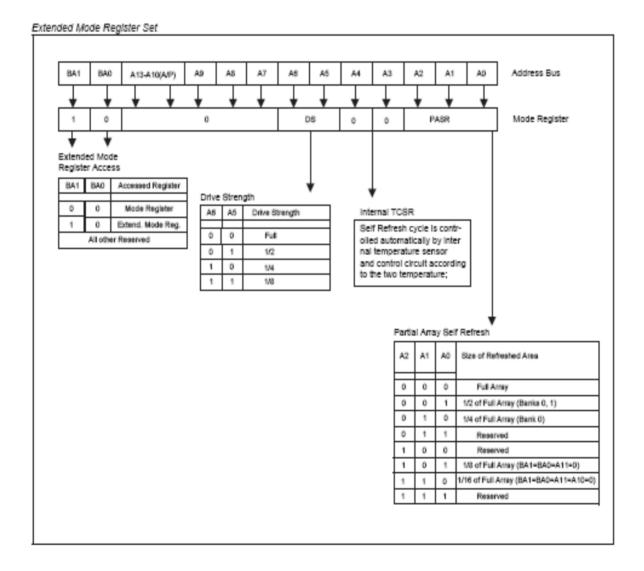

Confidential 33 Rev 1.0 Mar/2014



### Signal and Timing Description

### General Description

The 1G bit mobile DDR is a 128M byte mobile DDR SDRAM. It consists of four banks. Each bank is organized as 16384 rows x 1024 columns x 16 bits.

Read and Write accesses are burst oriented. Accesses begin with the registration of an Activate command, which is then followed by a Read or Write command. The address bits registered coincident with the Activate command are used to select the bank and the row to be accessed. BA1 and BA0 select the bank, address bits A13.. A0 select the row. Address bits A9.. A0 registered coincident with the Read or Write commands are used to select the starting column location for the burst access.

The regular Single Data Rate SDRAM read and write cycles only use the rising edge of the external clock input. For the mobile SDRAM the special signals DQSx (Data Strobe) are used to mark the data valid window. During read bursts, the data valid window coincides with the high or low level of the DQSx signals. During write bursts, the DQSx signal marks the center of the valid data window. Data is available at every rising and falling edge of DQSx, therefore the data transfer rate is doubled.

For Read accesses, the DQSx signals are aligned to the clock signal CLK.

### Special Signal Description


#### Clock Signal

The mobile DDR operates with a differential clock (CLK and  $\overline{\text{CLK}}$ ) input. CLK is used to latch the address and command signals. Data input and DMx signals are latched with DQSx. The minimum and maximum clock cycle time is defined by  $t_{\text{CK}}$ .

The minimum and maximum clock duty cycle are specified using the minimum clock high time  $t_{CH}$  and the minimum clock low time  $t_{CH}$  respectively.

#### **Command Inputs and Addresses**

Like single data rate SDRAMs, each combination of RAS, CAS and WE input in conjunction with CS input at a rising edge of the clock determines a mobile DDR command.

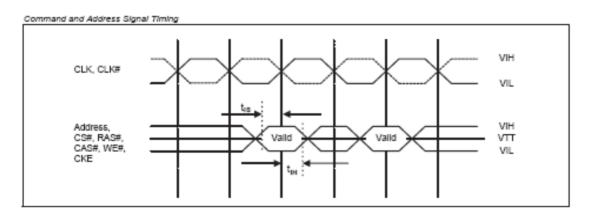

Confidential 34 Rev 1.0 Mar/2014





### Data Strobe and Data Mask

### **Operation at Burst Reads**

The Data Strobes provide a 3-state output signal to the receiver circuits of the controller during a read burst. The data strobe signal goes 1 clock cycle low before data is driven by the mobile DDR and then toggles low to high and high to low till the end of the burst. CAS latency is specified to the first low to high transition. The edges of the Output Data signals and the edges of the data strobe signals during a read are nominally coincident with edges of the input clock. The tolerance of these edges is specified by the parameters  $t_{AC}$  and  $t_{DQSCK}$  and is referenced to the crossing point of the CLK and /CLK signal. The  $t_{DQSQ}$  timing parameter describes the skew between the data strobe edge and the output data edge.

The following table summarizes the mapping of LDQS, UDQS, LDM and UDM signals to the data bus.

### Mapping of LDQS, UDQS, LDM and UDM

Data strobe signal	Data mask signal	Controlled data bus		
LDQS	LDM	DQ7 DQ0		
UDQS	UDM	DQ8 DQ15		

The minimum time during which the output data is valid is critical for the receiving device. This also applies to the Data Strobe DQS during a read since it is tightly coupled to the output data. The parameters  $t_{QH}$  and  $t_{DQSQ}$  define the minimum output data valid window. Prior to a burst of read data, given that the device is not currently in burst read mode, the data strobe signals transit from Hi-Z to a valid logic low. This is referred to as the data strobe "read preamble"  $t_{RPRE}$ . This transition happens one clock prior to the first edge of valid data.


Once the burst of read data is concluded, given that no subsequent burst read operation is initiated, the data strobe signals transit from a valid logic low to Hi-Z. This is referred to as the data strobe "read post amble" t<sub>RPST</sub>.

Confidential 35 Rev 1.0 Mar/2014





## Data Output Timing - $t_{AC}$ and $t_{DQSCK}$

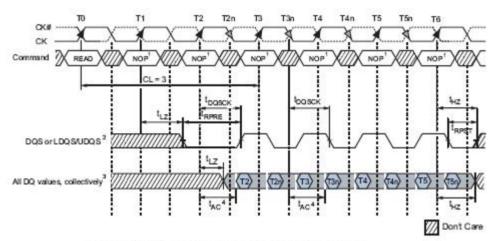

Notes: 1. Commands other than NOP can be valid during this cycle.


- DQ transitioning after DQS transitions define tooso window.
- 3. All DQ must transition by <sup>1</sup>50sq after DQS transitions, regardless of <sup>1</sup>AC.
- t<sub>AC</sub> is the DQ output window relative to CK and is the long-term component of DQ skew.

Confidential 36 Rev 1.0 Mar/2014




#### Operation at Burst Write

During a write burst, control of the data strobe is driven by the memory controller. The LDQS, UDQS signals are centered with respect to data and data mask. The tolerance of the data and data mask edges versus the data strobe edges during writes are specified by the setup and hold time parameters of data (tQDQSS & tQDQSH) and data mask (tDMDQSS & tDMDQSH). The input data is masked in the same cycle when the corresponding LDM, UDM signal is high (i.e. the LDM, UDM mask to write latency is zero.)

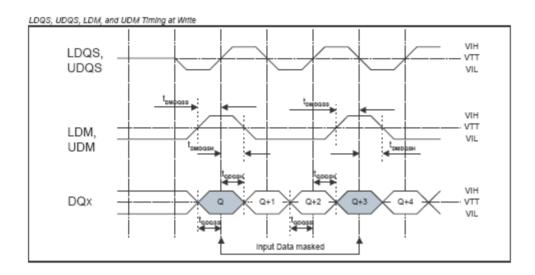

Prior to a burst of write data, given that the controller is not currently in burst write mode, the data strobe signal LDQS, UDQS changes from Hi-Z to a valid logic low. This is referred to as the data strobe Write Preamble. Once the burst of write data is concluded, given no subsequent burst write operation is initiated, the data strobe signal LDQS, UDQS transits from a valid logic low to Hi-Z. This is referred the data strobe Write Post amble, twpst. For mobile DRR data is written with a delay which is defined by the parameter tpqss, write latency). This is different than the single data rate SDRAM where data is written in the same cycle as the Write command is issued.

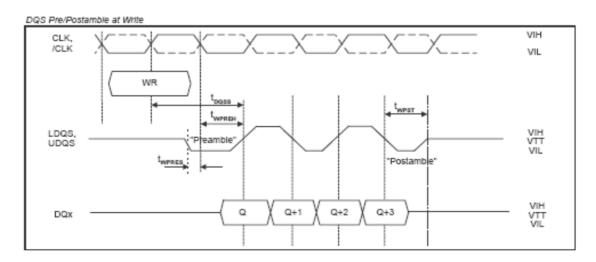


Confidential 37 Rev 1.0 Mar/2014



### Power-Up Sequence


The following sequence is highly recommended for Power-Up:

- 1. Apply power and start clock. Maintain CKE and the other pins are in NOP conditions at the input
- 2. Apply V<sub>DD</sub> before or at the same time as V<sub>DDQ</sub>, apply V<sub>DDQ</sub> before or at the same time as V<sub>REF</sub>, V<sub>TT</sub>
- 3. Start clock, maintain stable conditions for 200 us
- 4. Apply NOP and set CKE to high
- 5. Apply All Bank Precharge command
- 6. Issue Auto Refresh command twice and must satisfy minimum t<sub>RFC</sub>
- 7. Issue MRS (Mode Register Set command)
- 8. Issue a EMRS (Extended Mode Register Set command), not necessary

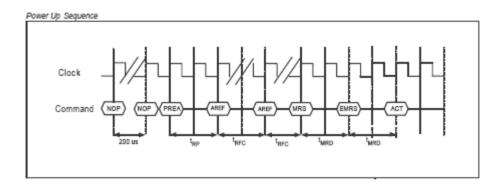

#### Mode Register Set Timing

The mobile DDR should be activated with CKE already high prior to writing into the mode register. Two Clock cycles are required complete the write operation in the mode register. The mode register contents can be changed using the same command and clock cycle requirements during operation as long as all banks are in the idle state.

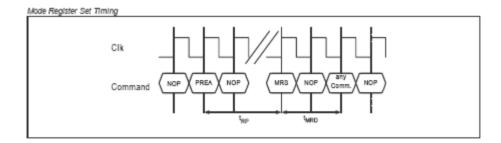


Confidential 38 Rev 1.0 Mar/2014




#### **Bank Activation Command (ACT)**

The Bank Activation command is initiated by issuing an ACT command at the rising edge of the clock. The mobile DDR has 4 independent banks which are selected by the two Bank select Addresses (BA0, BA1). The Bank Activation command must be applied before any Read or Write operation can be executed. The delay from the Bank Activation command to the first read or write command must meet or exceed the minimum of RAS to CAS delay time (t<sub>RCDRD</sub> min. for read commands and t<sub>RCDWR</sub> min. for write commands). Once a bank has been activated, it must be precharged before another Bank Activate command can be applied to the same bank. The minimum time interval between interleaved Bank Activate commands (Bank A to Bank B and vice versa) is the Bank to Bank activation delay time (t<sub>RRD</sub> min).



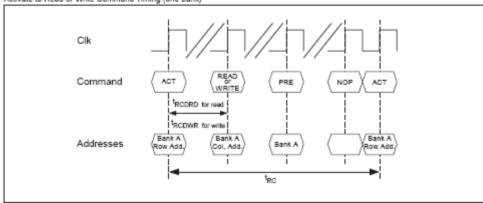

#### Activate Bank A to Activate Bank B Timing

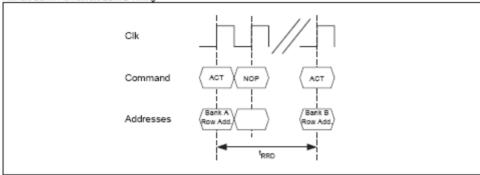

Confidential 39 Rev 1.0 Mar/2014




#### **Precharge Command**

This command is used to precharge or close a bank that has been activated. Precharge is initiated by issuing a Precharge command at the rising edge of the clock. The Precharge command can be used to precharge each bank respectively or all banks simultaneously. The Bank addresses BA0 and BA1 select the bank to be precharged. After a Precharge command, the analog delay tRP has to be met until a new Activate command can be initiated to the same bank.

#### Table

### **Precharge Control**


A10/AP	BA1	BAD	Precharged
0	0	0	Bank A Only
0	0	1	Bank B Only
0	1	0	Bank C Only
0	1	1	Bank D Only
1	Х	х	All Banks

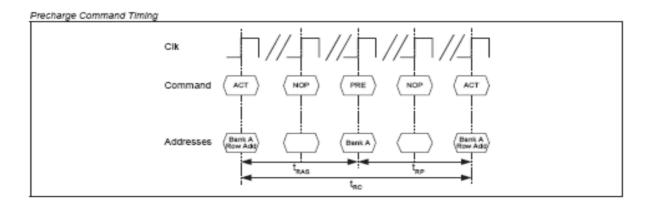



#### Self Refresh

The Self Refresh mode can be used to retain the data in the mobile DDR if the chip is powered down. To set the mobile DDR into a Self Refreshing mode, a Self Refresh command must be issued and CKE held low at the rising edge of the clock. Once the Self Refresh command is initiated, CKE must stay low to keep the device in Self Refresh mode. During the Self Refresh mode, all of the external control signals are disabled except CKE. The clock is internally disabled during Self Refresh operation to reduce power. An internal timing generator guarantees the self-refreshing of the memory content.

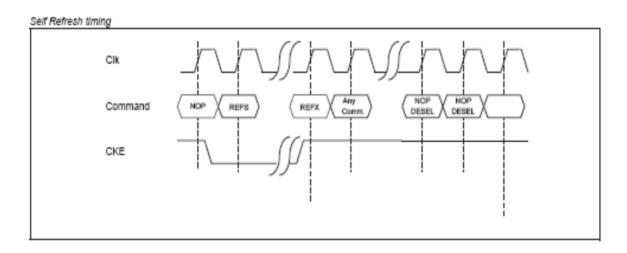


Confidential 41 Rev 1.0 Mar/2014




#### Auto Refresh

The auto refresh function is initiated by issuing an Auto Refresh command at the rising edge of the clock. All banks must be precharged and idle before the Auto Refresh command is applied. No control of the external address pins is required once this cycle has started. All necessary addresses are generated in the device itself. When the refresh cycle has completed, all banks will be in the idle state. A delay between the Auto Refresh command and the next Activate Command or subsequent Auto Refresh Command must be greater than or equal to the t REC(min).

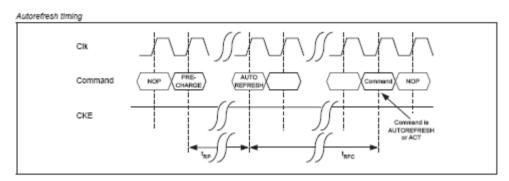

#### Power Down Mode

The Power Down Mode is entered when CKE is set low and exited when CKE is set high. The CKE signal is sampled at the rising edge of the clock. Once the Power Down Mode is initiated, all of the receiver circuits except CLK and the CKE circuits are gated off to reduce power consumption. All banks can be set to idle state or stay activate during Power down Mode, but burst activity may not be performed. After exiting from Power Down Mode, at least one clock cycle of command delay must be inserted before starting a new command. During Power Down Mode, refresh operations cannot be performed; therefore, the device cannot remain in Power Down Mode longer than the refresh period (t REF) of the device.

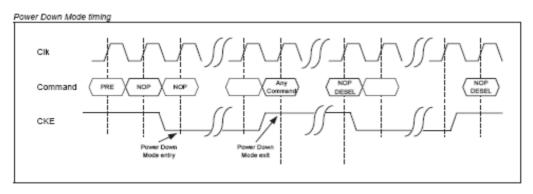


Confidential 42 Rev 1.0 Mar/2014



### Deep Power Down Mode

The Deep Power Down mode is a unique function with very low standby currents. All internal voltage generators inside the mobile DDR are stopped and all memory data is lost in this mode. To enter the Deep Power Down mode all banks must be precharged.

### Deep Power Down Mode Entry

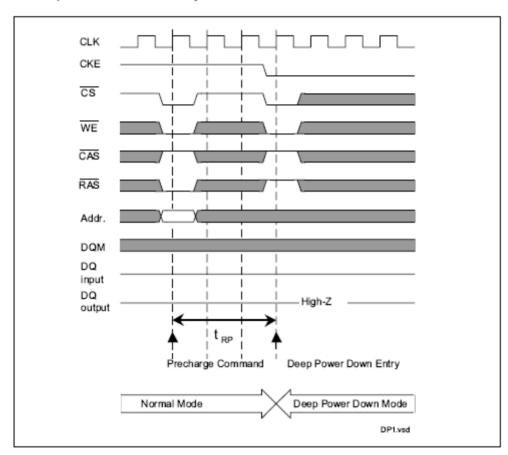

The deep power down mode has to be maintained for a minimum of 100µs.

Confidential 43 Rev 1.0 Mar/2014






### Deep Power Down Exit

The deep power down mode is exited by asserting CKE high.

After the exit, the following sequence is needed to enter a new command:

- 1. Maintain NOP input conditions for a minimum of 200 us
- 2. Issue precharge commands for all banks of the device
- 3. Issue two or more auto refresh commands and satisfy minimum  $t_{\mbox{\scriptsize RFC}}$
- 4. Issue a mode register set command to initialize the mode register
- 5. Issue an extended mode register set command to initialize the extended mode register

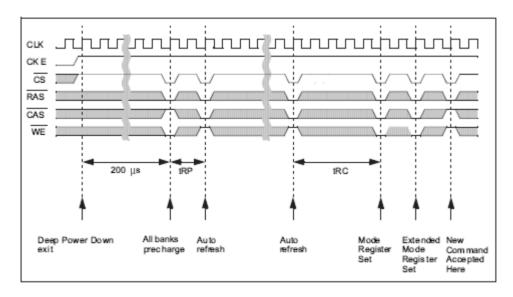



### **Burst Mode Operation**

Burst mode operation is used to provide a constant flow of data to the memory (write cycle) or from the memory (read cycle). The burst length is programmable and set by address bits A0 - A3 during the Mode Register Setup command. The burst length controls the number of words that will be output after a read command or the number of words to be input after a write command. One word is 32 bits wide. The sequential burst length can be set to 2, 4, 8 or 16 data words.


#### Burst Mode and Sequence

Burst Length	Start	ing Col	ımn Ad	dress	Order of Access within a Burst					
Durst Length	A3	A2	A1	Α0	Type = Sequential	Type = Interleaved				
				0	0 - 1	0 - 1				
2				1	1 - 0	1 - 0				
			0	0	0-1-2-3	0-1-2-3				
4			0	1	1-2-3-0	1 - 0 - 3 - 2				
4			1	0	2 - 3 - 0 - 1	2 - 3 - 0 - 1				
1	0 0 0 0 0 1 1 0 0 0 1 1 0 0 0 1 1 0 0 0 0 1 0	3-0-1-2	3-2-1-0							
		0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7				
		0	0	1	1 - 2 - 3 - 4 - 5 - 6 - 7 - 0	1-0-3-2-5-4-7-6				
		0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5				
8		0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4				
		1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3				
		1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2				
		1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1				
		1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0				
	0	0	0	0	0-1-2-3-4-5-6-7-8-9-A-B-C-D-E-F	0-1-2-3-4-5-6-7-8-9-A-B-C-D-E-F				
	0	0	0	1	1-2-3-4-5-6-7-8-9-A-B-C-D-E-F-0	1-0-3-2-5-4-7-6-9-8-B-A-D-C-F-E				
	0	0	1	0	2-3-4-5-6-7-8-9-A-B-C-D-E-F-0-1	2-3-0-1-6-7-4-5-A-B-8-9-E-F-C-D				
	0	0	1	1	3-4-5-6-7-8-9-A-B-C-D-E-F-0-1-2	3-2-1-0-7-6-5-4-B-A-9-8-F-E-D-C				
	0	1	0	0	4-5-6-7-8-9-A-B-C-D-E-F-0-1-2-3	4-5-6-7-0-1-2-3-C-D-E-F-8-9-A-B				
	0	1	0	1	5-6-7-8-9-A-B-C-D-E-F-0-1-2-3-4	5-4-7-6-1-0-3-2-D-C-F-E-9-8-B-A				
	0	1	1	0	6-7-8-9-A-B-C-D-E-F-0-1-2-3-4-5	6-7-4-5-2-3-0-1-E-F-C-D-A-B-8-9				
16	0	1	1	1	7-8-9-A-B-C-D-E-F-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0-F-E-D-C-B-A-9-8				
10	1	0	0	0	8-9-A-B-C-D-E-F-0-1-2-3-4-5-6-7	8-9-A-B-C-D-E-F-0-1-2-3-4-5-6-7				
	1	0	0	1	9-A-B-C-D-E-F-0-1-2-3-4-5-6-7-8	9-8-B-A-D-C-F-E-1-0-3-2-5-4-7-6				
1	1	0	1	0	A-B-C-D-E-F-0-1-2-3-4-5-6-7-8-9	A-B-8-9-E-F-C-D-2-3-0-1-6-7-4-5				
	1	0	1	1	B-C-D-E-F-0-1-2-3-4-5-6-7-8-9-A	B-A-9-8-F-E-D-C-3-2-1-0-7-6-5-4				
	1	1	0	0	C-D-E-F-0-1-2-3-4-5-6-7-8-9-A-B	C-D-E-F-8-9-A-B-4-5-6-7-0-1-2-3				
1		1	0	1	D-E-F-0-1-2-3-4-5-6-7-8-9-A-B-C	D-C-F-E-9-8-B-A-5-4-7-6-1-0-3-2				
	1	1	1	0	E-F-0-1-2-3-4-5-6-7-8-9-A-B-C-D	E-F-C-D-A-B-8-9-6-7-4-5-2-3-0-1				
	1	1	1	1	F-0-1-2-3-4-5-6-7-8-9-A-B-C-D-E	F-E-D-C-B-A-9-8-7-6-5-4-3-2-1-0				



#### Burst Read Operation: (READ)

The Burst Read operation is initiated by issuing a READ command at the rising edge of the clock after  $t_{RCD}$  from the bank activation. The address inputs (A8.. A0) determine the starting address for the burst. The burst length (2, 4 or 8) must be defined in the Mode Register. The first data after the READ command is available depending on the CAS latency. The subsequent data is clocked out on the rising and falling edge of LDQS, UDQS until the burst is completed. The LDQS, UDQS signals are generated by the mobile DDR during the Burst Read Operation.

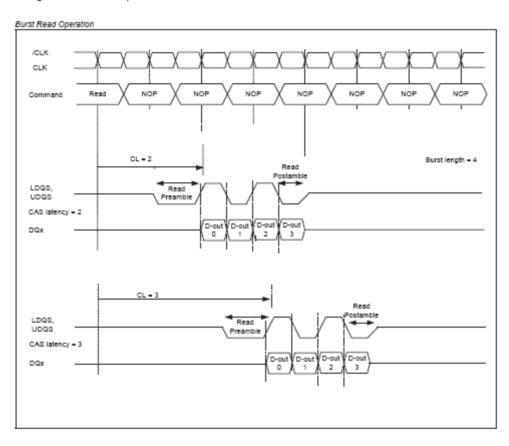


Confidential 46 Rev 1.0 Mar/2014



#### **Burst Write Operation (WRITE)**

The Burst Write is initiated by issuing a WRITE command at the rising edge of the clock. The address inputs (A8 .. A0) determine starting column address. Data for the first burst write cycle must be applied on the DQ pins on the first rise edge of LDQS, UDQS follow WRITE command. The time between the WRITE command and the first corresponding edge of the data strobe is tDQSS. The remaining data inputs must be supplied on each subsequent rising and falling edge of the data strobe until the burst length is completed. When the burst has been finished, any additional data supplied to the DQ pins will be ignored.

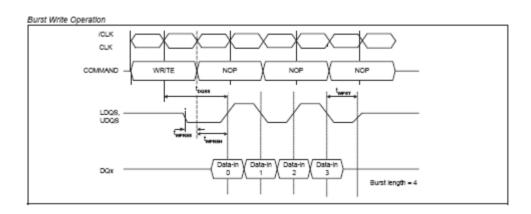


Confidential 47 Rev 1.0 Mar/2014



### **Burst Stop Command (BST)**

A Burst Stop is initiated by issuing a BURST STOP command at the rising edge of the clock. The Burst Stop Command has the fewest restrictions, making it the easiest method to terminate a burst operation before it has been completed. When the Burst Stop Command is issued during a burst read cycle, read data and LDQS, UDQS go to a high-Z state after a delay which is equal to the CAS latency set in the Mode Register. The Burst Stop latency is equal to the CAS latency CL. The Burst Stop command is not supported during a write burst operation. Burst Stop is also illegal during Read with Auto-Precharge

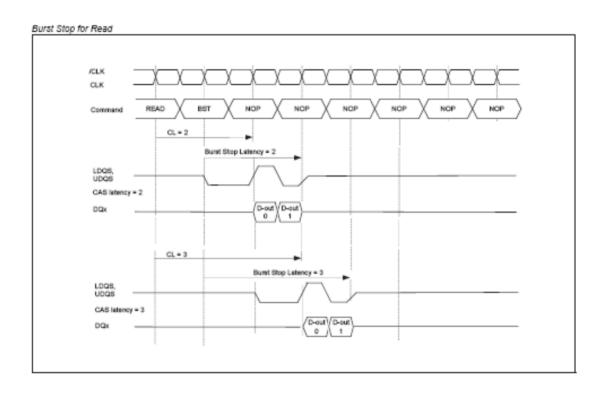


Confidential 48 Rev 1.0 Mar/2014




### Data Mask (LDM, UDM) Function

The mobile DDR has a Data Mask function that can be used only during write cycles. When the Data Mask is activated, active high during burst write, the write operation is masked immediately. The LDM, UDM to data-mask latency zero. LDM and UDM can be issued at the rising or negative edge of Data Strobe.

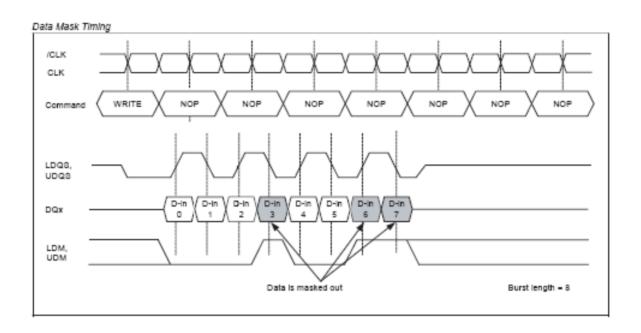

Confidential 49 Rev 1.0 Mar/2014



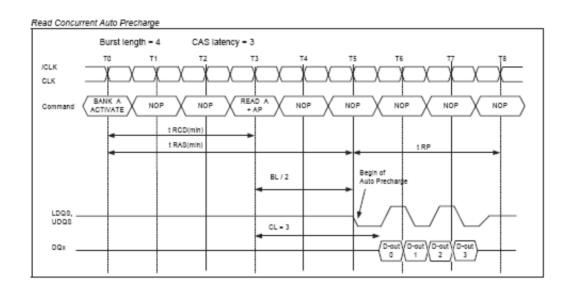

#### Concurrent Read Auto Precharge Support

Asserted		For same Bank		For different Bank			
Command	T4	T5	T6	T4	T5	T6	
READ	NO	NO	NO	NO	YES	YES	
READ+AP	YES	YES	NO	NO	YES	YES	
ACTIVATE	NO	NO	NO	YES	YES	YES	
PRECHARGE	YES	YES	NO	YES	YES	YES	

Note: This table is for the case of Burst Length = 4, CAS Latency =3 and twR=2 clocks

When READ with Auto Precharge is asserted, new commands can be asserted at T4,T5 and T6 as shown in Table

An interrupt of a running READ burst with Auto Precharge i.e. at T4 and T5 to the same bank with another READ+AP command is allowed, it will extend the begin of the internal Precharge operation to the last READ+AP command.

Interrupts of a running READ burst with Auto Precharge i.e. at T4 are not allowed when doing concurrent command to another active bank. ACTIVATE or PRECHARGE commands to another bank are always possible while a READ with Auto Precharge operation is in progress.


Confidential 50 Rev 1.0 Mar/2014



#### Write with Autoprecharge (WRITE A)

If A8 is high when a Write command is issued, the Write with Auto-Precharge function is performed. The internal precharge begins after the write recovery time two and transfer and transfer are satisfied.

If a Write with Auto Precharge command is initiated, the mobile DDR automatically enters the precharge operation at the first rising edge of CLK after the last valid edge of DQS (completion of the burst) plus the write recovery time two. Once the precharge operation has started, the bank cannot be reactivated and the new command cannot be asserted until the Precharge time (tpp) has been satisfied. If tpas(min) has not been satisfied yet, an internal interlock will delay the precharge operation until it is satisfied.

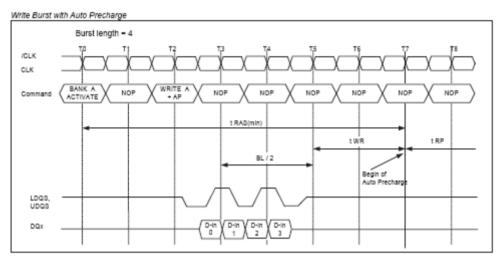

Note: tWR starts at the first rising edge of clock after the last valid edge of the 4 DQSx.

Table Concurrent Write Auto Precharge Support

Asserted		For same Bank						For different Bank				
Command	Т3	T4	T5	T6	T7	T8	T3	T4	T5	T6	T7	
WRITE	NO	NO	NO	NO	NO	NO	NO	YES	YES	YES	YES	
WRITE+AP	YES	NO	NO	NO	NO	NO	NO	YES	YES	YES	YES	
READ	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	YES	
READ+AP	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	YES	
ACTIVATE	NO	NO	NO	NO	NO	NO	YES	YES	YES	YES	YES	
PRECHARGE	NO	NO	NO	NO	NO	NO	YES	YES	YES	YES	YES	

When Write with Auto Precharge is asserted, new commands can be asserted at T3.. T8 as shown in Table .


An interrupt of a running WRITE burst with Auto Precharge I.e. at T3 to the same bank with another WRITE+AP command is allowed as long as the burst is running, it will extend the begin of the internal Precharge operation to the last WRITE+AP command.

Interrupts of a running WRITE burst with Auto Precharge I.e. at T3 are not allowed when doing concurrent WRITE is to another active bank. Consecutive WRITE or WRITE+AP bursts (T4...T7) to other open banks are possible. ACTIVATE or PRECHARGE commands to another bank are always possible while a WRITE with Auto Precharge operation is in progress.

Confidential 51 Rev 1.0 Mar/2014






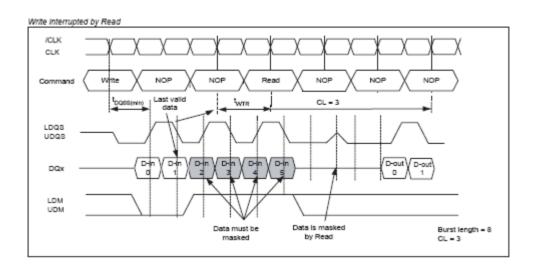

### Write Interrupted by a Precharge

A Burst Write operation can be interrupted before completion of the burst by a Precharge of the same bank. Random column access is allowed. A Write Recovery time ( $t_{WR}$ ) is required from the last data to Precharge command. When Precharge command is asserted, any residual data from the burst write cycle must be masked by LDM, UDM.

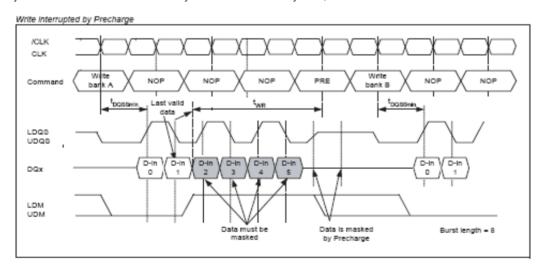

Confidential 52 Rev 1.0 Mar/2014





#### Command Table

#### Table Command Overview

Operation	Code	CKE n-1	CKE n	CS#	RAS#	CAS#	WE#	BAO	BA1	A10	A0-9 A11,12
Device Deselect	DESEL	Н	Х	Н	Х	Х	Х	Х	Х	Х	Х
No operation	NOP	Н	Х	L	Н	Н	Н	Х	Х	Х	Х
Mode Register Setup	MRS	Н	Х	L	L	L	L	0	0	OPC	ODE
Extended Mode Register Setup	EMRS	Н	Х	L	L	L	L	0	1	OPC	ODE
Bank Activate	ACT	Н	Х	L	L	Н	Н	BA	BA	Row A	ddress
Read	READ	Н	Х	L	Н	L	Н	BA	BA	L	Col.
Read with Auto Precharge	READA	Н	Х	L	Н	L	Н	BA	BA	Н	Col.
Write Command	WRITE	Н	Х	L	Н	L	L	BA	BA	L	Col.
Write Command with Auto Precharge	WRITEA	Н	Х	L	Н	L	L	BA	BA	Н	Col.
Burst Stop	BST	Н	Х	L	Н	Н	L	Х	Х	Х	Х
Precharge Single Bank	PRE	Н	Х	L	L	Н	L	BA	BA	L	Х
Precharge All Banks	PREAL	Н	Х	L	L	Н	L	Х	Х	Н	Х
Autorefresh	REF	Н	Н	L	L	L	Н	Х	Х	Х	Х
Self Refresh Entry	REFX	Н	L	L	L	L	Н	Х	Х	Х	Х
Self Refresh Exit	SREFEX	L	H	H	X	X H	X H	X X	X X	X	X
Power Down Mode Entry (Note 1)	PWDNEN	H	L L	H	X H	X H	X H	X X	X X	X X	X
Power Down Mode Exit	PWDNEX	L	н	H	X valld	X valid	X valid	х	х	х	х
Deep Power Down Mode Entry	idle	н	L	L	н	Н	L	х	х	Х	Х
Deep Power Down Mode Exit	Deep pow- er down	L	Н	Х	х	х	Х	х	х	Х	Х

Note: 1: The Power Down Mode Entry command is illegal during Burst Read or Burst Write operations.



#### Function Truth Table I

Current State	Command	Address	Action	Note
	DESEL	x	NOP	3
IDLE	NOP	x	NOP	3
	BST	x	NOP	3
	READ / READA	BA,CA,A10	ILLEGAL	1
	WRITE / WRITEA	BA,CA,A10	ILLEGAL	1
	ACT	BA, RA	Bank Active	$\top$
	PRE / PREAL	BA, A10	NOP	$\top$
	AREF / SREF	х	AUTO-Refresh or Self-Refresh	4
	MRS / EMRS	Op-Code	Mode Register Set or Extended Mode Register Set	$\top$
	DESEL	х	NOP	$\top$
	NOP	x	NOP	$\top$
	BST	х	NOP	$\top$
	READ / READA	BA, CA, A10	Begin Read, Determine Auto Precharge	9
ROW ACTIVE	WRITE / WRITEA	BA, CA, A10	Begin Write, Determine Auto Precharge	9
ACTIVE	ACT	BA, RA	ILLEGAL	1,
	PRE / PREAL	BA, A10	Precharge / Precharge All	
	AREF / SREF	x	ILLEGAL	$\top$
	MRS / EMRS	OP-Code	ILLEGAL	$\top$
	DESEL	x	Continue burst to end	$\top$
	NOP	х	Continue burst to end	$\top$
	BST	х	Terminate Burst	$\top$
	READ / READA	BA, CA, A10	Terminate burst, Begin New Read, Determine Auto- Prechgarge	7
READ	WRITE / WRITEA	BA, CA, A10	ILLEGAL	2,
	ACT	BA, RA	ILLEGAL	1
	PRE / PREAL	BA ,A10	Terminate Burst / Precharge	$\top$
	AREF / SREF	x	ILLEGAL	$\top$
	MRS / EMRS	Op-Code	ILLEGAL	$\top$
	DESEL	х	Continue burst to end, Precharge	$\top$
	NOP	х	Continue burst to end, Precharge	$\top$
READ with Auto Precharge	BST	х	ILLEGAL	$\top$
	READ / READA	BA, CA, A10	ILLEGAL	$\top$
	WRITE / WRITEA	BA, CA, A10	ILLEGAL	$\top$
	ACT	BA, RA	ILLEGAL	1
	PRE / PREAL	BA ,A10	ILLEGAL	1
	AREF / SREF	x	ILLEGAL	+
	MRS / EMRS	Op-Code	ILLEGAL	+-



#### Function Truth Table I

WRITE   WRITE   BA, CA, A10	Current State	Command	Address	Action	Notes
BST		DESEL	×	Continue burst to end	
WRITE		NOP	x	Continue burst to end	
WRITE		BST	x	ILLEGAL	
WRITE / WRITEA   BA, CA, A10   Precharge   2,7		READ / READA	BA, CA, A10		7, 8
PRE / PREAL   BA, A10   Terminate Burst , Precharge   8	WRITE	WRITE / WRITEA	BA, CA, A10		2, 7
AREF / SREF X ILLEGAL  MRS / EMRS OP-Code ILLEGAL  DESEL X Continue burst to end, Precharge  NOP X Continue burst to end, Precharge  BST X ILLEGAL  WRITE / WRITEA BA, CA, A10 ILLEGAL  ACT BA, RA ILLEGAL  MRS / EMRS OP-Code ILLEGAL  1 PRE / PREAL BA, A10 ILLEGAL  MRS / EMRS OP-Code ILLEGAL  NOP X NOP (Row Active after t <sub>RCD</sub> )  BST X NOP (Row Active after t <sub>RCD</sub> )  READ / READA BA, CA, A10 ILLEGAL  1, 9  READ / READA BA, CA, A10 ILLEGAL  READ / READA BA, CA, A10 ILLEGAL  1, 9  READ / READA BA, CA, A10 ILLEGAL  NOP ROW ACTIVATING  ACT BA, RA ILLEGAL  1, 9  READ / READA BA, CA, A10 ILLEGAL  NOP (Row Active after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  1, 5  PRE / PREAL BA, A10 ILLEGAL  NOP (Row Active after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  NOP (Row Active after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  NOP (Row Idle after t <sub>RCD</sub> )  NOP (Row Idle after t <sub>RCD</sub> )  NOP (Row Idle after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  NOP (Row Idle after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  NOP (Row Idle after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  NOP (Row Idle after t <sub>RCD</sub> )  ACT BA, RA ILLEGAL  1  PRECHARGE  WRITE / WRITEA BA, CA, A10 ILLEGAL  1  ACT BA, RA ILLEGAL  1  AREF / SREF X ILLEGAL  1  AREF / SREF		ACT	BA, RA	BA, RA ILLEGAL	
MRS / EMRS		PRE / PREAL	BA, A10	Terminate Burst , Precharge	8
DESEL   X   Continue burst to end, Precharge		AREF / SREF	x	ILLEGAL	
NOP		MRS / EMRS	OP-Code	ILLEGAL	
SST		DESEL	x	Continue burst to end, Precharge	
### READ / READA BA, CA, A10   ILLEGAL		NOP	x	Continue burst to end, Precharge	
WRITE / WRITEA   BA, CA, A10   ILLEGAL   1		BST	х	ILLEGAL	
Auto Precharge  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, A10 ILLEGAL 1  AREF / SREF X ILLEGAL 1  NOP Code ILLEGAL 1  NOP (Row Active after t <sub>RCD</sub> )  BST X NOP (Row Active after t <sub>RCD</sub> )  READ / READA BA, CA, A10 ILLEGAL 1, 9  WRITE / WRITEA BA, CA, A10 ILLEGAL 1, 9  ACT BA, RA ILLEGAL 1, 5  PRE / PREAL BA, A10 ILLEGAL 1, 5  PRE / PREAL BA, A10 ILLEGAL 1, 6  AREF / SREF X NOP (Row Idle after t <sub>RP</sub> )  NOP X NOP (Row Idle after t <sub>RP</sub> )  PRECHARGE WRITEA BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREADA BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREADA BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREADA BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, A10 NOP (Row Idle after t <sub>RP</sub> ) 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, A10 NOP (Row Idle after t <sub>RP</sub> ) 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, A10 NOP (Row Idle after t <sub>RP</sub> ) 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, A10 NOP (Row Idle after t <sub>RP</sub> ) 1  ACT BA, RA ILLEGAL 1	WRITE with	READ / READA	BA, CA, A10	ILLEGAL	
PRE / PREAL   BA, A   ILLEGAL   1		WRITE / WRITEA	BA, CA, A10	ILLEGAL	
AREF / SREF X ILLEGAL  MRS / EMRS OP-Code ILLEGAL  DESEL X NOP ( Row Active after t <sub>RCD</sub> )  NOP X NOP ( Row Active after t <sub>RCD</sub> )  BST X NOP ( Row Active after t <sub>RCD</sub> )  READ / READA BA, CA, A10 ILLEGAL 1, 9  WRITE / WRITEA BA, CA, A10 ILLEGAL 1, 5  PRE / PREAL BA, A10 ILLEGAL 1, 6  AREF / SREF X ILLEGAL 1, 6  MRS / EMRS OP-Code ILLEGAL 1, 6  NOP ( Row Idle after t <sub>RP</sub> )  NOP X NOP ( Row Idle after t <sub>RP</sub> )  BST X NOP ( Row Idle after t <sub>RP</sub> )  PRECHARGE WRITE / WRITEA BA, CA, A10 ILLEGAL 1  ACT BA, CA, A10 ILLEGAL 1  PRECHARGE WRITE / WRITEA BA, CA, A10 ILLEGAL 1  ACT BA, CA, A10 ILLEGAL 1  AREF / SREF X ILLEGAL 1  AREF / SREF X ILLEGAL 1	Precharge	ACT	BA, RA	ILLEGAL	1
MRS / EMRS		PRE / PREAL	BA, A10	ILLEGAL	1
DESEL   X		AREF / SREF	х	ILLEGAL	
NOP		MRS / EMRS	OP-Code	ILLEGAL	
BST		DESEL	x	NOP ( Row Active after t <sub>RCD</sub> )	
READ / READA   BA, CA, A10   ILLEGAL   1, 9		NOP	х	NOP ( Row Active after t <sub>RCD</sub> )	
ROW   ACTIVATING		BST	х	NOP ( Row Active after t <sub>RCD</sub> )	
ACT		READ / READA	BA, CA, A10	ILLEGAL	1, 9
ACT BA, RA ILLEGAL 1, 5 PRE / PREAL BA, A10 ILLEGAL 1, 6 AREF / SREF X ILLEGAL MRS / EMRS OP-Code ILLEGAL DESEL X NOP (Row Idle after t <sub>RP</sub> ) NOP X NOP (Row Idle after t <sub>RP</sub> ) BST X NOP (Row Idle after t <sub>RP</sub> ) READ / READA BA, CA, A10 ILLEGAL 1 PRECHARGE WRITE / WRITEA BA, CA, A10 ILLEGAL 1 ACT BA, RA ILLEGAL 1 PRE / PREAL BA, A10 NOP (Row Idle after t <sub>RP</sub> ) 1 AREF / SREF X ILLEGAL 1		WRITE / WRITEA	BA, CA, A10	ILLEGAL	1, 9
AREF / SREF X ILLEGAL  MRS / EMRS OP-Code ILLEGAL  DESEL X NOP ( Row Idle after t <sub>RP</sub> )  NOP X NOP ( Row Idle after t <sub>RP</sub> )  BST X NOP ( Row Idle after t <sub>RP</sub> )  READ / READA BA, CA, A10 ILLEGAL 1  PRECHARGE  WRITE / WRITEA BA, CA, A10 ILLEGAL 1  ACT BA, RA ILLEGAL 1  PRE / PREAL BA, A10 NOP ( Row Idle after t <sub>RP</sub> ) 1  AREF / SREF X ILLEGAL 1		ACT	BA, RA	ILLEGAL	1, 5
MRS / EMRS         OP-Code         ILLEGAL           DESEL         X         NOP ( Row Idle after t <sub>RP</sub> )           NOP         X         NOP ( Row Idle after t <sub>RP</sub> )           BST         X         NOP ( Row Idle after t <sub>RP</sub> )           READ / READA         BA, CA, A10         ILLEGAL         1           PRECHARGE         WRITE / WRITEA         BA, CA, A10         ILLEGAL         1           ACT         BA, RA         ILLEGAL         1           PRE / PREAL         BA, A10         NOP ( Row Idle after t <sub>RP</sub> )         1           AREF / SREF         X         ILLEGAL		PRE / PREAL	BA, A10	ILLEGAL	1, 6
DESEL		AREF / SREF	x	ILLEGAL	
NOP		MRS / EMRS	OP-Code	ILLEGAL	
BST   X   NOP ( Row Idle after t <sub>RP</sub> )		DESEL	x	NOP ( Row idle after t <sub>RP</sub> )	
READ / READA         BA, CA, A10         ILLEGAL         1           PRECHARGE         WRITE / WRITEA         BA, CA, A10         ILLEGAL         1           ACT         BA, RA         ILLEGAL         1           PRE / PREAL         BA, A10         NOP ( Row idle after tap)         1           AREF / SREF         X         ILLEGAL         ILLEGAL		NOP	x	NOP ( Row Idle after t <sub>RP</sub> )	
PRECHARGE         WRITE / WRITEA         BA, CA, A10         ILLEGAL         1           ACT         BA, RA         ILLEGAL         1           PRE / PREAL         BA, A10         NOP ( Row idle after t <sub>RP</sub> )         1           AREF / SREF         X         ILLEGAL		BST	х	NOP ( Row Idle after t <sub>RP</sub> )	
ACT         BA, RA         ILLEGAL         1           PRE / PREAL         BA, A10         NOP (Row Idle after t <sub>RP</sub> )         1           AREF / SREF         X         ILLEGAL		READ / READA	BA, CA, A10	ILLEGAL	1
PRE / PREAL         BA, A10         NOP ( Row Idle after t <sub>RP</sub> )         1           AREF / SREF         X         ILLEGAL	PRECHARGE	WRITE / WRITEA	BA, CA, A10	ILLEGAL	1
AREF / SREF X ILLEGAL		ACT	BA, RA	ILLEGAL	1
		PRE / PREAL	BA, A10	NOP ( Row Idle after t <sub>RP</sub> ) 1	
MRS / EMRS OP-Code ILLEGAL		AREF / SREF	x	ILLEGAL	
		MRS / EMRS	OP-Code	ILLEGAL	



#### Function Truth Table I

Current State	Command Address Action		Notes	
	DESEL	×	NOP (Row Active after t <sub>WR</sub> )	
	NOP	x	NOP (Row Active after t <sub>WR</sub> )	
WRITE RECOVERING	BST	x	NOP (Row Active after t <sub>WR</sub> )	
	READ / READA	BA, CA, A10	Begin Read, Determine Auto-Prechgarge	2
	WRITE / WRITEA	BA, CA, A10	Begin Write, Determine Auto-Prechgarge	
	ACT	BA, RA	ILLEGAL	2
	PRE / PREAL	BA ,A10	ILLEGAL	1, 10
	AREF / SREF	x	ILLEGAL	
	MRS / EMRS	OP-Code	ILLEGAL	
	DESEL	x	NOP (Precharge after t <sub>WR</sub> )	
	NOP	x	NOP (Precharge after t <sub>WR</sub> )	
	BST	x	NOP (Precharge after t <sub>WR</sub> )	
WRITE	READ / READA	BA, CA, A10	ILLEGAL	1, 2
RECOVERING with AUTO-	WRITE / WRITEA	BA, CA, A10	ILLEGAL	1
PRECHARGE		BA, RA	ILLEGAL	1
	PRE / PREAL	BA ,A10	ILLEGAL	1
	AREF / SREF	x	ILLEGAL	
	MRS / EMRS	OP-Code	ILLEGAL	
	DESEL	x	NOP (Idle after t <sub>RC</sub> )	
	NOP	x	NOP (Idle after t <sub>RC</sub> )	
	BST	х	NOP (Idle after t <sub>RC</sub> )	
	READ / READA	BA, CA, A10	ILLEGAL	
REFRESH	WRITE / WRITEA	BA, CA, A10	ILLEGAL	
	ACT	BA, RA	ILLEGAL	- 11
	PRE / PREAL	BA ,A10	ILLEGAL	
	AREF / SREF	x	ILLEGAL	
	MRS / EMRS	OP-Code	ILLEGAL	
	DESEL	x	NOP (Idle after two clocks)	
	NOP	x	NOP (Idle after two clocks)	
(EXTENDED) MODE REGISTER SET	BST	x	NOP (Idle after two clocks)	
	READ / READA	BA, CA, A10	ILLEGAL	
	WRITE / WRITEA	BA, CA, A10	ILLEGAL	
	ACT	BA, RA	ILLEGAL	
	PRE / PREAL	BA ,A10	ILLEGAL	
	AREF / SREF	x	ILLEGAL	
	MRS / EMRS	OP-Code	ILLEGAL	



Note: All entries assume the CKE was High during the preceding clock cycle

Note: 1. Illegal to bank specified states; function may be legal in the bank indicated by BAx, depending on the state of that bank

Note: 2. Must satisfy bus contention, bus turn around, write recovery requirements.

Note: 3. If both banks are idle, and CKE is inactive, the device will enter Power Down Mode. All input buffers except CKE, CLK and CLK# will be disabled.

Note: 4. If both banks are idle, and CKE is deactivated coincidentally with an Auto Refresh command, the device will enter Self Refresh Mode. All input buffers except CKE will be disabled.

Note: 5. Illegal, if tRRD is not satisfied.

Note: 6. Illegal, if tRAS is not satisfied.

Note: 7. Must satisfy burst interrupt condition.

Note: 8. Must mask two preceding data bits with the DM pin.

Note: 9. Illegal, if t<sub>RCD</sub> is not satisfied. Note: 10. Illegal, if t<sub>WR</sub> is not satisfied. Note: 11. Illegal, if t<sub>RC</sub> is not satisfied.

#### Abbreviations:

Н	High Level
L	Low Level
X	Don't Care
V	Valid Data Input
RA	Row Address
ВА	Bank Address
PA	Precharge All
NOP	No Operation
CA	Column Address
Ax	Address Line x

Confidential 57 Rev 1.0 Mar/2014



#### FUNCTION TRUTH TABLE for CKE

H	Current State	CKE n-1		CKE n	CS#	RAS#	CAS#	WE#	Address	Action	Notes
L	. Contracting		Self Refresh Entry	1							
Color   Colo		L		Н	Н	Х	Х	Х	х	Exit Self-Refresh	1
REFRESH		L		Н	L	н	Н	Н	х	Exit Self-Refresh	1
L		L		Н	L	Н	Н	L	х	ILLEGAL	1
L		L		Н	L	Н	Н	Х	х	ILLEGAL	1
POWER   H		L		Н	L	L	L	Х	х	ILLEGAL	1
DOWN	Ī	L		L	Х	Х	Х	Х	х	NOP ( Maintain Self Refresh)	1
DOWN		Н		Х	Х	Х	Х	Х	х	INVALID	
H		L		Н	Х	Х	Х	Х	х	Exit Power Down ( Idle after tpDEX)	1
ALL BANKS IDLE  H L L H H L H X Enter Self Refresh  H L L H H H X X X X Enter Power-Down  H L L H H H X Enter Power-Down  H L L H H L L H L ILLEGAL		L		L	Х	Х	Х	Х	Х	NOP ( Maintain Power Down)	
ALL BANKS IDLE  H L H H H L L H H H L L H H L L H H L L H H L L H H L L H H L L H H L L H L L H L L H L L H L L H L L H L L H L L H L X ILLEGAL		Н		Н	Х	Х	Х	Х	х	Refer to Function Truth Table	2
ALL BANKS IDLE  H	Ī	Н		L	L	L	L	Н	х	Enter Self Refresh	3
BANKS	Ī	Н		L	Н	Х	Х	Х	х	Enter Power-Down	2
IDLE		Н		L	L	Н	Н	Н	х	Enter Power-Down	2
		Н		L	L	Н	Н	L		ILLEGAL	2
l		Н		L	L	Н	L	Х		ILLEGAL	2
HILILIX X   IILLEGAL		Н		L	L	L	Х	Х		ILLEGAL	2
L X X X X X X Refer to Power Down in this table	İ	L		Х	Х	Х	Х	Х	х	Refer to Power Down In this table	
All other states H H X X X X X Refer to Funtion Truth Table	All other states	Н	er states	Н	Х	Х	Х	Х	х	Refer to Funtion Truth Table	

Note: 1. CKE low-to-high transition re-enables inputs asynchronously. A minimum setup time to CLK must be satisfied before any commands other than EXIT are executed.

Note: 2. Power Down can be entered when all banks are Idle (banks can be active or precharged)

Note: 3. Self Refresh can be entered only from the Precharge / Idle state.


#### Abbreviations:

Н	High Level
L	Low Level
X	Don't Care
V	Valid Data Input
RA	Row Address
ВА	Bank Address
PA	Precharge All
NOP	No Operation
CA	Column Address





Mobile DDR SDRAM operation State Diagram

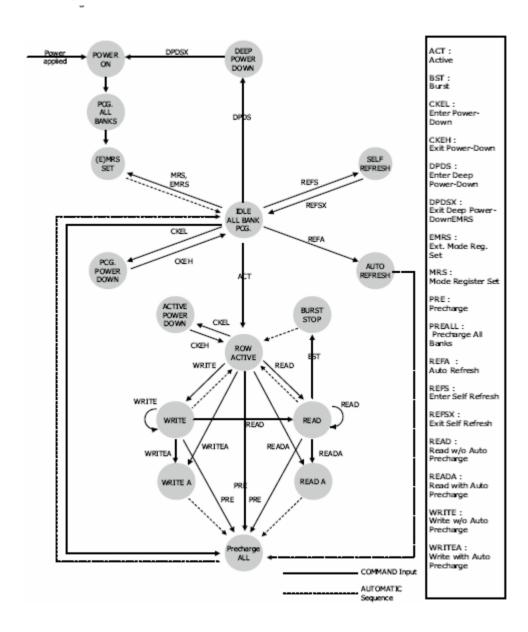



# IDD Max Specifications and Conditions

Conditions	Version			
Conditions	Symbol	-6	Unit	
Operating current - One bank Active-Precharge; tRC = tRC (min); tCK = tCK (min); CKE = High; CS = High between valid command; Address inputs are switching every 2 clock cycles; Data bus inputs are stable	IDD0	55	mA	
Precharge power-down standby current; All banks idle; CKE = Low; CS = High; tCK = tCK (min); Address and control inputs are switching; Data bus inputs are stable	IDD2P	2	mA	
Precharge power-down standby current; Clock stopped; All banks idle; CKE = Low; CS = High; CK = Low; CK = High; Address and control inputs are switching; Data bus inputs are stable	IDD2PS	2	mA	
<b>Precharge nonpower-down standby current;</b> All banks idle; CKE = High; CS = High; tCK = tCK (min); Address and control inputs are switching; Data bus inputs are stable	IDD2N	25	mA	
Precharge nonpower-down standby current; Clock stopped; All banks idle; CKE = High; CS = High; CK = Low; CK = High; Address and control inputs are switching; Data bus inputs are stable	IDD2NS	18	mA	
Active power-down standby current; One bank active; CKE = Low; CS = High; tCK = tCK (min); Address and control inputs are switching; Data bus inputs are stable	IDD3P	2	mA	
Active power-down standby current; Clock stopped; One bank active; CKE =Low; CS = High; CK = Low; CK = High; Address and control inputs are switching; Data bus inputs are stable	IDD3PS	2	mA	
Active nonpower-down standby current; One bank active; CKE = High; CS = High; tCK = tCK (min); Address and control inputs are switching; Data bus inputs are stable	IDD3N	25	mA	
Active nonpower-down standby current; Clock stopped; One bank active; CKE = High; CS = High; CK = Low; CK = High; Address and control inputs are switching; Data bus inputs are stable	IDD3NS	18	mA	
Operating current - burst read; One bank active; Burst length = 4; tCK = tCK (min); Continuous Read burst; Address inputs are switching every 2 clock cycles; 50% of data changing at every burst; lout = 0 m A	IDD4R	85	mA	
Operating current - burst write; One bank active; Burst length = 4; tCK = tCK (min); Continuous Write burst; Address inputs are switching every 2 clock cycles; 50% of data changing at every burst	IDD4W	85	mA	
Auto refresh current; Burst refresh; CKE = High; Address and control inputs are switching; Data bus inputs are stable	IDD5	90	mA	
Deep Power Down Current; Address and control inputs are stable; Data bus inputs are stable	IDD8	5	uA	





### Partial Array Self Refresh Current (PASR)

Parameter & Test Condition	Extended Mode Register A[2:0] Tcase [°C]	Symb.	max.	Unit	Note
Self Refresh Current Self Refresh Mode CKE = 0.2V, tck = infinity, full array activations, all banks	85°C max.	ICC6	2.0	mA	
Self Refresh Current Self Refresh Mode CKE = 0.2V, tck = infinity, 1/2 array activations	85°C max.	ICC6	1.6	mA	
Self Refresh Current Self Refresh Mode CKE = 0.2V, tck = infinity, 1/4 array activation	85°C max.	ICC6	1.4	mA	
Self Refresh Current Self Refresh Mode CKE = 0.2V, tck = infinity, 1/8 array activation	85°C max.	ICC6	1.2	mA	
Self Refresh Current Self Refresh Mode CKE = 0.2V, tck = infinity, 1/16 array activation	85°C max.	ICC6	1.2	mA	



### Absolute Maximum Ratings

Parameter	Symbol	Value	Unit
Voltage on any pin relative to V <sub>SS</sub>	$V_{IN}, V_{OUT}$	-0.5 ~ 2.7	V
Voltage on V <sub>DD</sub> supply relative to V <sub>SS</sub>	$V_{DD}, V_{DDQ}$	-0.5 ~ 2.7	V
Storage temperature	T <sub>STG</sub>	-55 ~ +150	°C
Power dissipation	P <sub>D</sub>	1.0	W
Short circuit current	I <sub>os</sub>	50	mA

Note: Permanent device damage may occur if ABSOLUTE MAXIMUM RATINGS are exceeded.

Functional operation should be restricted to recommended operating condition

Exposure to higher than recommended voltage for extended periods of time could affect device reliability.

### **Capacitance** ( $V_{DD} = 1.8V$ , $T_A = 25$ °C, f = 1MHz)

Parameter	Symbol	Min	Max	Unit
Input capacitance ( A <sub>0</sub> ~A <sub>13</sub> , BA <sub>0</sub> ~BA <sub>1</sub> ,CKE, CS, RAS, CAS, WE )	C <sub>IN1</sub>	1.5	3.0	pF
Input capacitance ( CK, CK)	C <sub>IN2</sub>	1.5	3.0	pF
Data & DQS input/output capacitance ( DQ <sub>0</sub> ~DQ <sub>15</sub> )	C <sub>OUT</sub>	3.0	5.0	pF
Input capacitance ( DMs )	C <sub>IN3</sub>	3.0	5.0	pF

Confidential 62 Rev 1.0 Mar/2014



### Power & DC Operating Conditions (LVCMOS In/Out)

Recommended operating conditions ( Voltage referenced to  $V_{SS}$  = 0V )

Parameter	Symbol	Min	Тур	Max	Unit
Device Supply voltage	$V_{DD}$	1.7	1.8	1.95	V
Output Supply voltage	$V_{DDQ}$	1.7	1.8	1.95	V
Input logic high voltage	V <sub>IH</sub>	0.7*V <sub>DDQ</sub>	-	V <sub>DDQ</sub> +0.30	V
Input logic low voltage	V <sub>IL</sub>	-0.3	-	0.3*V <sub>DDQ</sub>	V
Input Leakage current	l <sub>l</sub>	-2	-	2	uA
Output Leakage current	IOZ	-5	-	5	uA

### **AC Input Operating Conditions**


Recommended operating conditions (Voltage referenced to  $V_{SS}$  = 0V,  $V_{DD}$  = 1.7V ~1.95V)

Parameter	Symbol	Min	Тур	Max	Unit
Input High (Logic 1) Voltage; DQ	V <sub>IH</sub>	V <sub>CCQ</sub> *0.8	-	V <sub>CCQ</sub> +0.3	V
Input Low (Logic 0) Voltage; DQ	V <sub>IL</sub>	-0.3	-	0.2* V <sub>DDQ</sub>	V
Clock Input Crossing Point Voltage; CK and CK	V <sub>IX</sub>	0.4*V <sub>DDQ</sub>	-	0.6*V <sub>DDQ</sub>	V

### **AC Operating Test Conditions**

Recommended operating conditions (Voltage referenced to  $V_{SS}$  = 0V,  $V_{DD}$  = 1.7V ~1.95V)

Parameter	Value	Unit
AC input levels (Vih/Vil)	0.8*VDDQ / 0.2*VDDQ	V
Input timing measurement reference level	0.5*VDDQ	V
Input signal minimum slew rate	1.0	V/ns
Output timing measurement reference level	0.5*VDDQ	V
Output load condition	See below figures	

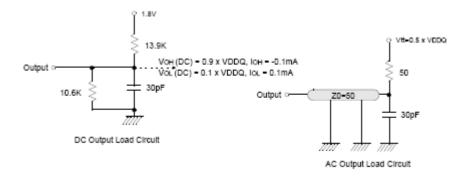



### **AC Timing Parameters & Specification**

AC CHARACTERISTICS		-6			Ī
PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTES
Output data access time from CK/CK	<sup>t</sup> AC	2	5	ns	3
CK high-level width	<sup>t</sup> CH	0.45	0.55	<sup>t</sup> CK	
CK low-level width	<sup>t</sup> CL	0.45	0.55	<sup>t</sup> CK	
Clock cycle time CL =	3 <sup>t</sup> CK (3)	6	-	ns	1
DQ and DM input hold time relative to DQS	tDH t	0.6		ns	5,6
DQ and DM input setup time relative to DC	S tDS	0.6		ns	5,6
DQ and DM input pulse width (for each inp	ut) <sup>t</sup> DIPW	1.6		ns	
Access window of DQS from CK/CK	<sup>t</sup> DQSCK	2	5	ns	
DQS input high pulse width	<sup>t</sup> DQSH	0.4	0.6	<sup>t</sup> CK	
DQS input low pulse width	<sup>t</sup> DQSL	0.4	0.6	<sup>t</sup> CK	
DQS-DQ skew, DQS to last DQ valid, per group, per access	<sup>t</sup> DQSQ		0.5	ns	1
Write command to first DQS latching transition	<sup>t</sup> DQSS	0.75	1.25	<sup>t</sup> CK	
Half clock period	tHP	t tCL		ns	
Data-out high-impedance window from CK/CK	<sup>t</sup> HZ	0.4	0.6	<sup>t</sup> CK	
Data-out <u>low-</u> impedance window from CK/CK	<sup>t</sup> LZ	1		ns	
Address and control input hold time	<sup>t</sup> IH	1.1		ns	1
Address and control input setup time	<sup>t</sup> IS	1.1		ns	1
LOAD MODE REGISTER command cycle time	<sup>t</sup> MRD	2		<sup>t</sup> CK	
DQ-DQS hold, DQS to first DQ to go non-valid, per access	<sup>t</sup> QH	t - <sup>t</sup> QHS		ns	
Data hold skew factor	<sup>t</sup> QHS		0.65	ns	
ACTIVE to PRECHARGE command	<sup>t</sup> RAS	42	70K	ns	
ACTIVE to READ with Auto precharge command	<sup>t</sup> RAP	15		ns	
ACTIVE to ACTIVE/AUTO REFRESH command period	<sup>t</sup> RC	60		ns	
AUTO REFRESH command period	<sup>t</sup> RFC	72		ns	
ACTIVE to READ or WRITE delay	<sup>t</sup> RCD	18		ns	
PRECHARGE command period	<sup>t</sup> RP	18		ns	





AC CHARACTERISTICS		-6			
PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTES
DQS read preamble	<sup>t</sup> RPRE	0.9	1.1	<sup>t</sup> CK	
DQS read post amble	<sup>t</sup> RPST	0.4	0.6	<sup>t</sup> CK	
ACTIVE bank A to ACTIVE bank B command	<sup>t</sup> RRD	12		ns	
DQS write preamble	<sup>t</sup> WPRE	0.25		<sup>t</sup> CK	
DQS write preamble setup time	tWPRES	0		ns	4
DQS write post amble	tWPST	0.4	0.6	<sup>t</sup> CK	
Write recovery time	<sup>t</sup> WR	15		ns	
Internal WRITE to READ command delay	<sup>t</sup> WTR	2		<sup>t</sup> CK	
Average periodic refresh interval	<sup>t</sup> REFI		7.8	us	
Power down exit time	<sup>t</sup> PDEX	1*t + <sup>t</sup> IS		ns	



1. Input Setup/Hold Slew Rate Derating

Input Setup/Hold Slew Rate	tIS	tIH
(V/ns)	(ps)	(ps)
1.0	0	0
0.8	+50	+50
0.6	+100	+100

This derating table is used to increase  $t_{\text{IS}}/t_{\text{IH}}$  in the case where the input slew rate is below 1.0V/ns.

- 2. Minimum 3CLK of tDAL (= tWR + tRP) is required because it need minimum 2CLK for tWR and minimum 1CLK for tRP.
- tAC(min) value is measured at the high Vdd(1.95V) and cold temperature(-25 C).
   tAC (max) value is measured at the low Vdd(1.7V) and hot temperature(85 C).
   tAC is measured in the device with half driver strength and under the AC output load condition.
- 4. The specific requirement is that DQS be valid(High or Low) on or before this CK edge. The case shown(DQS going from High\_Z to logic Low) applies when no writes were previously in progress on the bus. If a previous write was in progress, DQS could be High at this time, depending on tDQSS.

5. I/O Setup/Hold Slew Rate Derating

I/O Setup/Hold Slew Rate	tDS	tDH
(V/ns)	(ps)	(ps)
1.0	0	0
0.8	+75	+75
0.6	+150	+150

This derating table is used to increase  $t_{DS}/t_{DH}$  in the case where the I/O slew rate is below 1.0V/ns.

6. I/O Delta Rise/Fall Rate(1/slew-rate) Derating


Delta Rise/Fall Rate	tDS	tDH
(ns/V)	(ps)	(ps)
0	0	0
0.25	+50	+50
0.5	+100	+100


This derating table is used to increase tDS/tDH in the case where the DQ and DQS slew rates differ. The Delta Rise/Fall Rate is calculated as 1/SlewRate1-1/SlewRate2. For example, if slew rate 1 = 1.0V/ns and slew rate 2 =0.8V/ns, then the Delta Rise/Fall Rate =-0.25ns/





### Package Diagram


#### 60-BALL 0.8mm pitch BGA

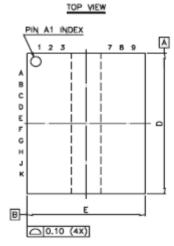

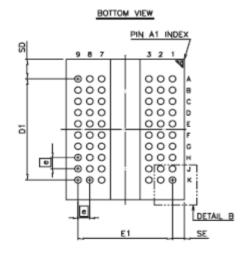





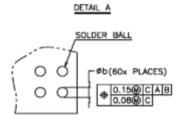

DETAIL B

Confidential

DIMENSION (inch) (mm) SYM MIN. NOM. MAX. MIN. NOM. MAX. 1.05 0.041 A1 0.30 0.35 0.40 0.012 0.014 0.016 A2 0.71 0.028 A3 0.13 0.18 0.23 0.005 0.007 0.009 ь 0.40 0.45 0.50 0.016 0.018 0.020 D 9.90 10,00 10,10 0.390 0.394 0.398 D1 7.20 BSC 0.283 BSC E 7.90 8.00 8.10 0.311 0.315 0.319 **E**1 6.40 BSC 0.252 BSC F 2.00 BSC 0.079 BSC SD 1.40 BSC 0.055 BSC SE 0.031 BSC 0.80 BSC # 0.80 BSC 0.031 BSC

DIMENSION

Rev 1.0 Mar/2014

NOTE:

f. CONTROLLING DIMENSION : MILLMETER.

67



### **Revision History**

Rev.	History	Date	Remark
1.0	Release	Mar. 2014	SM

Alliance Memory Inc. reserves the rights to change the specifications and products without notice.

Alliance Memory, Inc., 551 Taylor Way, Suite #1, San Carlos, CA 94070, USA

Tel: +1 650 610 6800 Fax: +1 650 620 9211

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

### Alliance Memory:

AS4C64M16MD1-6BCN AS4C64M16MD1-6BIN AS4C64M16MD1-6BCNTR AS4C64M16MD1-6BINTR